
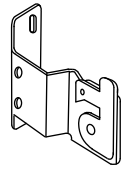
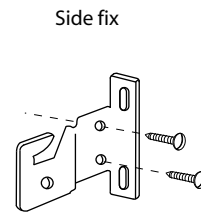
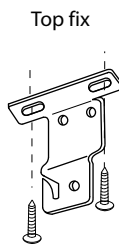


Spring Roller Blind Fitting Instructions

1. Fixings

Roller blinds are supplied with appropriate brackets and screws.

The fixings are universal and are suitable for side, top or face fixing - see illustrations.

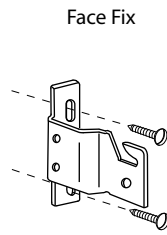



For reverse roll blinds a clip has been provided to hold the product in its brackets.

2. Attaching blind to brackets

When fixing inside a recess allow 1/2" between top of bracket and lintel.


It is essential that both brackets are level, otherwise the coiling of the cloth will be affected.

To fix use the top left-hand slot of the spring end and the top right-hand hole for the pin end - see illustrations on the right.

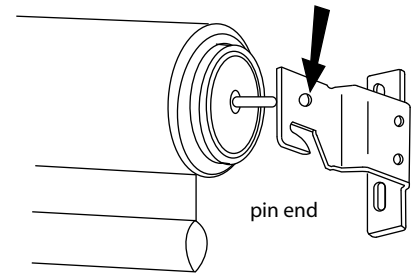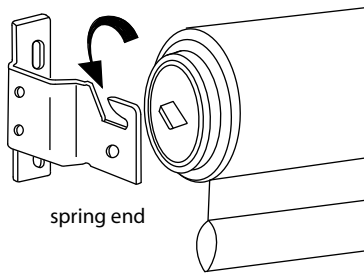

Take care also to allow a certain amount of play between roller and bracket. Too tight a fit will impair working of the spring mechanism or the pin end.


3. Tensioning or setting blind

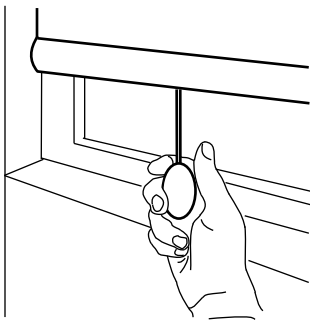

Fit coiled blind into brackets and pull blind down to the full drop of the window, allow to return slowly and lock into position, then remove very carefully from the brackets.

Make sure the flat pin is not disturbed. This pin is holding the tension of the internal roller spring. Carefully re-roll the fabric around the roller and refit the blind into the brackets.

If there is insufficient tension in the roller, pull blind down 18" and remove very carefully from the brackets, making sure the flat pin is not disturbed. This pin is holding the tension of the internal roller spring. Carefully re-roll the fabric around the roller and refit the blind into the brackets.

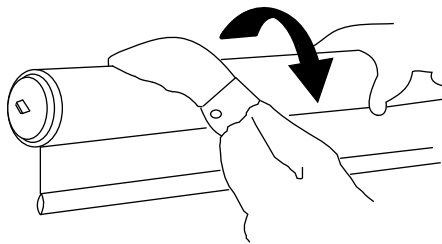

If there is still insufficient tension repeat instructions above until tension is just right.

Should it be necessary to reduce the spring tension carry out the following reverse procedure.

Pull the blind down 3" or 4" and lock in position. Remove assembly from the brackets and uncoil approximately 18" of fabric. Refit uncoiled blind into the brackets and blind is again ready for use.

CAUTION

To have the spring roller too fiercely tensioned can cause damage to the fabric. A tension sufficient to coil the cloth gently back to the fully rolled position is correct. As a general rule, when using pre-tensioned rollers, the roller should never be turned more than 15 times to increase the spring tension.

UNDER NO CIRCUMSTANCES SHOULD THE MECHANISM OF THE ROLLER BE OILED

IMPORTANT

Careless rough usage, particularly during raising, may bring the fabric into the contact with the installation brackets, causing damage to one or both sides of the blind.



WARNING

PARENTS SHOULD KNOW THAT CHILDREN COULD ACCIDENTALLY STRANGLE IN WINDOW COVERING CORDS.
KEEP CORDS OUT OF THE REACH OF CHILDREN

Any queries do not hesitate to call 01843 608780