


Mono-control Wood Venetian Blind Fitting Instructions


Your made to measure Mono-control Wood venetian is supplied with the appropriate brackets .
Please read the following instructions carefully before fitting your blind.

1. Positioning your brackets

Position the two outside brackets 100mm from the end of the blind. On blinds of approx 100cm two brackets will be supplied.

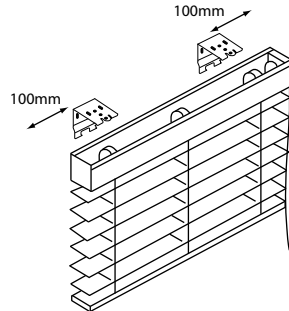


For blinds over 100cm one additional bracket will be provided every 50cm. These should be evenly spaced along the length of the blind.


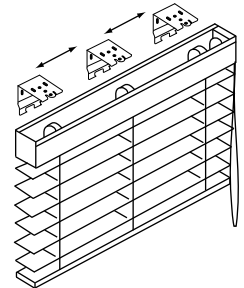


3. Fixing your brackets

Drill and plug holes as required


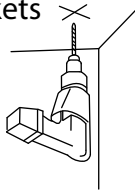


The brackets are designed to be used as either top fix (top of the window recess or ceiling) or face fix (wall or window frame). See illustrations to the right.

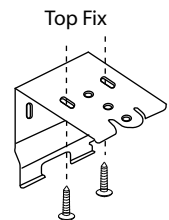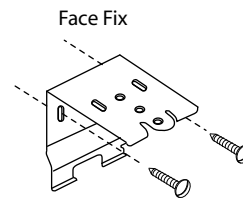


4. Attaching headrail to the brackets

Inert the back of the headrail into the bottom lip on all brackets

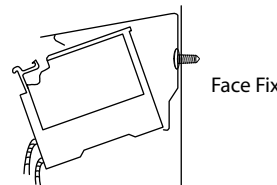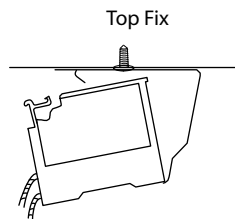


The snap the top of the headrail into the top of the brackets

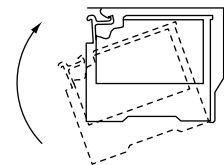

5. Removing headrail from the brackets

To remove the headrail use a screwdriver to lever the headrail from the outside lip of the bracket.

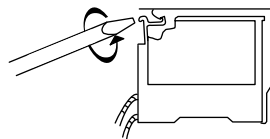

6. Operating

Tilt: Using both hands, gently pull the cord. If the slats do not tilt in the desired direction, gently pull in the other direction.

Raise or lower: Using both hands, gently pull the cord. The slats will tilt closed then the blind will raise or lower. If the blind does not move in the desired direction, pull in the opposite direction.



WARNING

PARENTS SHOULD KNOW THAT CHILDREN COULD ACCIDENTALLY STRANGLE IN WINDOW COVERING CORDS.
KEEP CORDS OUT OF THE REACH OF CHILDREN

Any queries do not hesitate to call 01843 608780